LTE Industrial Router SmartStart SL302

USER MANUAL





Powered by







Advantech B+B SmartWorx – Americas

Advantech B+B SmartWorx 707 Dayton Road Ottawa, IL 61350 USA

Phone +1 (815) 433-5100 **Fax** +1 (815) 433-5105

Website

www.advantech-bb.com

Advantech B+B SmartWorx – Europe

Advantech B+B SmartWorx s.r.o.

Sokolska 71 562 04, Usti nad Orlici, Czech Republic

Phone +420 465 524 421

Website www.advantech-bb.com

© 2017 Advantech B+B SmartWorx s.r.o. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photography, recording, or any information storage and retrieval system without written consent. Information in this manual is subject to change without notice, and does not represent a commitment on the part of Advantech B+B SmartWorx.

Advantech B+B SmartWorx s.r.o. shall not be liable for incidental or consequential damages resulting from the furnishing, performance, or use of this manual.

All brand names used in this manual are the registered trademarks of their respective owners. The use of trademarks or other designations in this publication is for reference purposes only and does not constitute an endorsement by the trademark holder.





Ŵ

(i)

Used symbols

Danger – Information regarding user safety or potential damage to the router.

Attention – Problems that can arise in specific situations.

Information, notice – Useful tips or information of special interest.

GPL licence

Source codes under GPL licence are available free of charge by sending an email to:

techSupport@advantech-bb.com.

Please see http://ep.advantech-bb.cz/devzone for more information.



Advantech B+B SmartWorx s.r.o., Sokolska 71, 562 04 Usti nad Orlici, Czech Republic Document No. MAN-0002-EN, revision from November 2, 2017. Released in the Czech Republic. Contents

AD\ANTECH

B+B SMARTWORX

Powered by

1	Safe	ty Instructions	2
2	Dire	ctives & Statements	3
	2.1 2.2	Product Disposal Instructions	3 3
3	Rou	ter Description	5
	3.1 3.2 3.3 3.4	LTE Category 1 (Cat.1)	5 5 5 6
4	Con	tents of Package	9
	4.1	Recommended Accessories	9
5	Rou	ter Design	10
	5.1 5.2 5.3 5.4 5.5 5.6 5.7 5.8	Router Versions .Delivery IdentificationOrder CodesBasic Dimensions of the Router5.4.1Front view5.4.2Top view5.4.3Bottom view5.4.4Rear viewMounting recommendationsRemoval of the DIN RailDescription of the Rear PanelDescription of the Front Panel5.8.1Status indication5.8.2Power PWR/IO Connector5.8.3Antenna Connector ANT, DIV and WiFi5.8.4SIM Card Reader5.8.5Ethernet Port ETH5.8.6Serial Port RS2325.8.7Reset	$\begin{array}{c} 10\\ 11\\ 12\\ 12\\ 13\\ 13\\ 14\\ 15\\ 16\\ 17\\ 18\\ 20\\ 21\\ 22\\ 23\\ 24 \end{array}$
6	First	t Use	25
	6.1 6.2	Connecting the Router Before the First Use	25 26

Powered by

	6.3	Configuration	26
		6.3.1 Configuration by web browser	26
7	Тес	hnical Parameters	28
	7.1 7.2 7.3 7.4 7.5 7.6	Technical specification of user interfacesStandards and RegulationsType Tests and Environmental ConditionsTechnical Parameters of Cellular ModuleTechnical Parameters of WiFi	28 29 29 30 31
8	7.7 Rec		31 32
9			33 33
10			35
	10.2	2 Customer Support for Europe	35 35 35

B+B SMARTWORX
Powered by
AD\ANTECH

List of Figures

1	Access to the Internet from LAN
2	Backed up access to the Internet
3	Using a VPN tunnel
4	Serial Gateway
5	Contents of package
6	Front panel
7	Product label
8	Certification label
9	Front view
10	Top view
11	Bottom view
12	Rear view
13	Default position of DIN holder
14	Removal of the DIN Rail
15	SmartStart front panel
16	PWR/IO connector
17	Circuit example – connection of power supply
18	Connecting the antenna
19	SIM cards
20	Ethernet connector
21	Connection of Ethernet cable
22	RS232 connector
23	Router reset
24	Router connection
25	Entering the IP address of the router
26	Entering login information
27	Router web interface

List of Tables

AD\ANTECH

B+**B** SMARTWORX

Powered by

1	Router versions	10
2	Delivery identification	11
3	Order codes overview	11
4	Front panel description	16
5	Status indication	17
6	Connection of PWR/IO connector	18
7	Characteristics of binary input	19
8	Connection of Ethernet connector	22
9	Connection of RS232 connector	23
10	Description of router reset and restart	24
11	Basic parameters	28
12	Technical specification of user interfaces	29
13	Standards and regulations	29
14	Type tests and environmental conditions	30
15	Technical parameters of cellular module	31
16	Technical parameters of WiFi	31
17	Other technical parameters	31



1. Safety Instructions



/!\

Please, observe the following instructions:

- The router must be used in compliance with all applicable international and national laws and in compliance with any special restrictions regulating the utilization of the router in prescribed applications and environments.
- To prevent possible injury and damage to appliances and to ensure compliance with all relevant provisions, use only the original accessories. Unauthorized modifications or the use of unapproved accessories may result in damage to the router and/or a breach of applicable regulations. Unauthorized modifications or use of unapproved accessories may void the warranty.
- The router can not be opened.
- Turn off the router and disconnect it from power supply before handling the SIM card.
- Caution! The SIM card could be swallowed by small children.
- Input voltage must not exceed 36 V DC max.
- Do not expose the router to extreme ambient conditions. Protect the router against dust, moisture and high temperature.
- Only routers with appropriate certification and labelling should be used in locations where flammable and explosive materials are present, including gas stations, chemical plants, or locations in which explosives are used. We remind users of the duty to observe the restrictions concerning the utilization of radio devices at such places.
- Switch off the router when traveling by plane. Utilization of the router on a plane may endanger the operation of the plane or interfere with the mobile telephone network, and may be unlawful. Failure to observe these instructions may result in the suspension or cancellation of telephone services for the respective client and/or may result in legal sanctions.
- When using the router in close proximity to personal medical devices, such as cardiac pacemakers or hearing aids, you must proceed with heightened caution.
- The router may cause interference when used in close proximity to TV sets, radio receivers or personal computers.
- It is recommended that you create an appropriate copy or backup of all important settings that are stored in the memory of the device.

2. Directives and Statements

2.1 Product Disposal Instructions

B+B SMARTWORX

AD\ANTECH

Powered by

The WEEE (Waste Electrical and Electronic Equipment: 2012/19/EU) directive was introduced to ensure that electrical/electronic products are recycled using the best available recovery techniques in order to minimize impact on the environment. This product contains high quality materials and components which can be recycled. At the end of it's life this product MUST NOT be mixed with other commercial waste for disposal. The device contains the battery. Remove the battery from the device before disposal. The battery in the device needs to be disposed apart accordingly. Check the terms and conditions of your supplier for disposal information.

2.2 FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following 2 conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Important: Changes or modifications to this product not authorized by Advantech B+B SmartWorx could void the electromagnetic compatibility (EMC) and wireless compliance and negate your authority to operate the product. This product has demonstrated EMC compliance under conditions that included the use of compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables between system components to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

3. Router Description

B+B SMARTWORX

AD\ANTECH

Powered by

Cellular router SmartStart SL302 is designed for wireless communication in the mobile networks that make use of traditional cellular technologies. The primary purpose of this router is its use in the newest Category 1 (Cat.1) services on the cellular LTE network of the **AT&T** and **Verizon** carriers.

3.1 LTE Category 1 (Cat.1)

Given the uncertain future of 2G technologies (they are gradually sunsetting), it needs to find a suitable (natural) replacement. LTE Category 1 (Cat.1) in general is the only real alternative to 2G. It is specifically designed to bring 4G LTE capabilities to the Internet of Things (IoT) and machine-to-machine (M2M) applications. Like all LTE services, Cat.1 provides a low-latency broadband connection but capped at 10 Mbps download (and 5 Mbps upload). It is an ideal solution for smart meters for utilities, telematics for vehicle tracking and fleet management and security use cases, such as in alarm systems.

3.2 Basic HW Information

As a standard, the SmartStart router is equipped with one Ethernet 10/100 Mbps, one serial interface RS232, one binary input and one output. SL302 also contains two readers for 3 V and 1.8 V SIM cards, which are placed on the rear panel of the device. The router can be equipped with a WiFi module, but this must be part of the initial configuration – it cannot be added to the router at some point in the future. The router is supplied in a plastic casing.

3.3 Configuration and Diagnostics

The router can be configured using a password-protected Web interface. The web interface provides (after logging in) detailed statistics about the router activities, signal strength, detailed system logs etc. This device supports the creation of VPN tunnels using technologies IPSec, OpenVPN and L2TP for secure communications. There are also supported functions such as IPv6 (the latest revision of the Internet Protocol), DHCP, NAT, NAT-T, DynDNS, NTP, VRRP, control by SMS, primary connection backups and many other functions are also supported.

Other diagnostic functions ensuring continuous communication include automatic inspection of PPP connection offering an automatic restart feature in case of connection is lost, or hardware watchdog which monitors the status of the router. Using a special window (start up script window) you may insert Linux scripts for various actions. For some applications is the key possibility to create several different configurations for one router which can be switched as needed (e.g. using SMS or status of the binary input). Cellular routers may automatically update configuration and firmware from server. This allows mass reconfiguration of many routers in one time.



The router also supports additional software such as R-SeeNet for permanent traffic monitoring of routers.



Examples of possible applications

- mobile office
- smart meters for utilities
- fleet management
- security systems

- telematic
- telemetric
- remote monitoring
- vending and dispatcher machines

3.4 Usage of the Router

The router is primarily intended for these four basic situations:

I. Access to the Internet from LAN

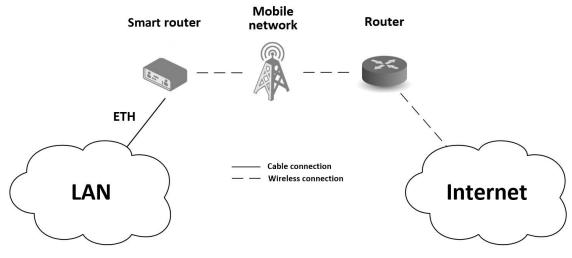


Figure 1: Access to the Internet from LAN



II. Backed up access to the Internet (from LAN)

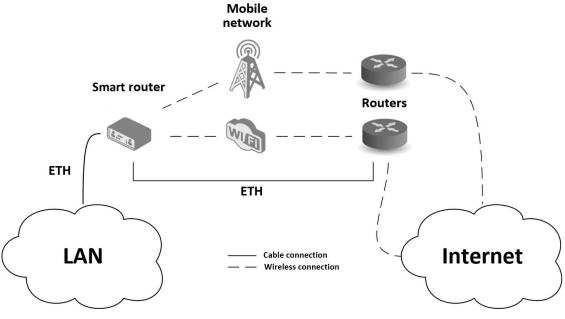


Figure 2: Backed up access to the Internet

III. Secure networks interconnection or using VPN

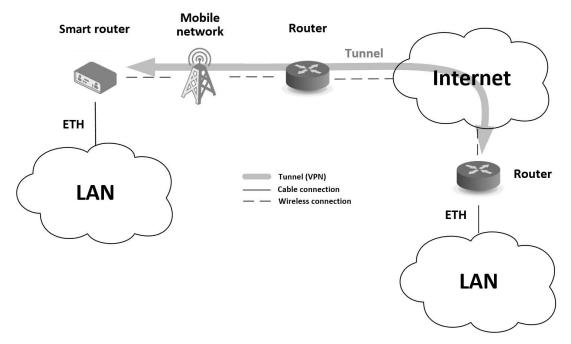


Figure 3: Using a VPN tunnel



IV. Serial Gateway

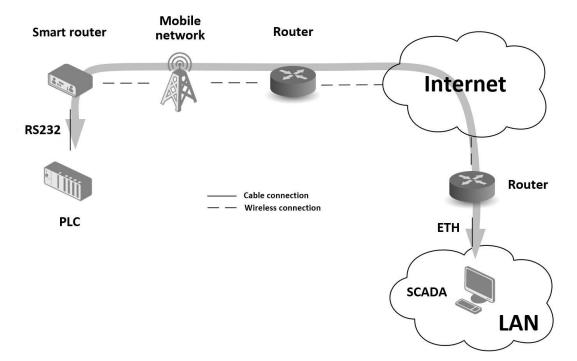


Figure 4: Serial Gateway



4. Contents of Package

The basic router set available for delivery includes the following items:

- router,
- power and IO cable (1.5 m long),
- clip for the DIN rail (two screws are included),
- paper start guide.



Figure 5: Contents of package

4.1 Recommended Accessories

The following list contains recommended accessories. These accessories are not included in the basic package!

- LTE antennas:
 - Terminal antenna Taoglas TG.30.8113, order code: BB-TG30
 - Magnetic mount antenna Taoglas GA.110.101111, order code: BB-GA110
- WiFi Antenna Sectron AW-A24G-SRPK2, order code: BB-AW-A24G-SRPK2
- Power Supply 12 V / 12 W, order code: BB-RPS-v3-MO4-M
 - Multi country (EU, UK, AUS, US)
 - Level Efficiency VI



5. Router Design

5.1 Router Versions

The SmartStart SL302 router is supplied in the following versions (see table below). All versions are available only in plastic casing.

Router versions	SIM	BIN	BOUT	ЕТН	RS232	WiFi
SL302 with RS232	2 x	1 x	1 x	1 x	1 x	
SL302 with RS232 & WiFi	2 x	1 x	1 x	1 x	1 x	1 x

Table 1: Router versions



Figure 6: Front panel



5.2 Delivery Identification

Trade name	Product name	Description
SL302	SmartStart	LTE router (Cat.1) for NAM (AT&T and/or Verizon
		carrier - see order codes bellow)

Table 2: Delivery identification



Figure 7: Product label

Figure 8: Certification label

5.3 Order Codes

The table below shows an overview of order codes.

Name	Order code	Features – interfaces
SmartStart SL302	BB-SL30200010	LTE module Cat.1 AT&T , 1x ETH, 1x RS232, 1x BIN, 1x BOUT, 2x SIM reader
SmartStart SL302	BB-SL30210110	LTE module Cat.1 AT&T , 1x ETH, 1x RS232, 1x BIN, 1x BOUT, 2x SIM reader, WiFi
SmartStart SL302	BB-SL30200010-X	LTE module Cat.1 AT&T + Verizon , 1x ETH, 1x RS232, 1x BIN, 1x BOUT, 2x SIM reader
SmartStart SL302	BB-SL30210110-X	LTE module Cat.1 AT&T + Verizon , 1x ETH, 1x RS232, 1x BIN, 1x BOUT, 2x SIM reader, WiFi

Table 3: Order codes overview



5.4 Basic Dimensions of the Router

5.4.1 Front view

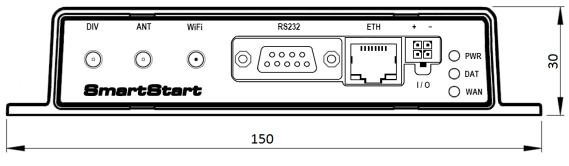


Figure 9: Front view

5.4.2 Top view

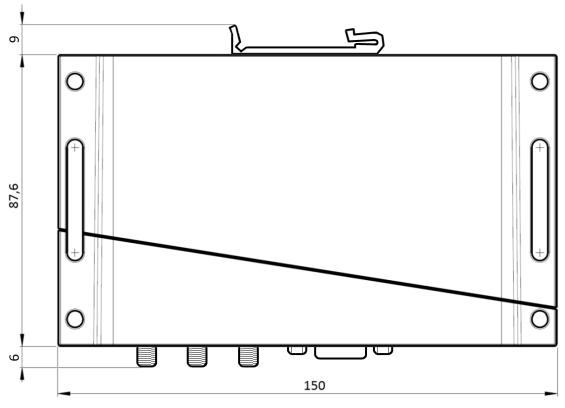


Figure 10: Top view



5.4.3 Bottom view

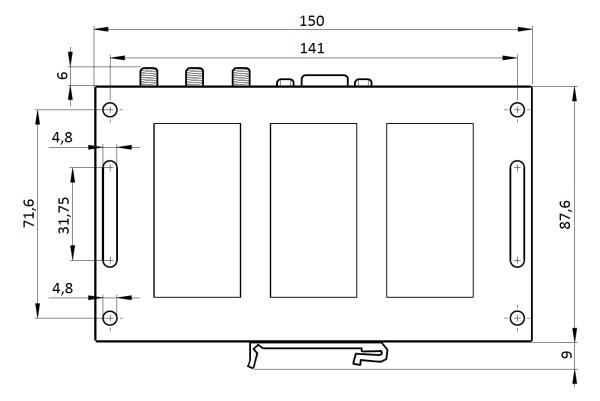


Figure 11: Bottom view

5.4.4 Rear view

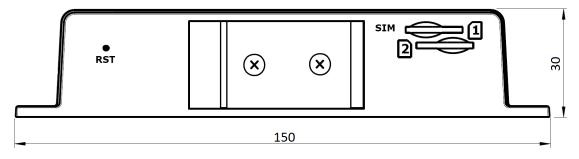


Figure 12: Rear view

5.5 Mounting recommendations

B+B SMARTWORX

AD\ANTECH

Powered by

- It is possible to place the router on a flat surface,
- mount the router on a wall using four holes in corners (Figure 11) and screws with diameter 4 mm,
- attach the router on DIN rail EN 60715 with the included clip BB-SBD25.

The router meets EN 61439-1:2011 requirements/certifications for low-voltage switchgear and control gear assemblies. These environments are described as:

- A non-public, industry environment of low voltage with high interference,
- A public environment of low voltage and without high interference.

For both of these environments it is possible to mount router to a switchboard, after which there is no need to have examination immunity or issues in connection with EMC according to EN 61439-1:2011.



Attention: If the negative pole of the router is grounded, there is no protection against reversed polarity!



To comply with the EN 61439-1:2011 specification, follow these instructions:

- For whip antennas it is recommended to observe a minimum distance of 6 cm from cables and metal surfaces on every side in order to avoid interference. When using an external antenna seperate from the switchboard it is necessary to fit a lightening conductor.
- When mounting a router on sheet-steel we recommend using a "cable" antenna.
- For all cables we recommend to bind the bunch, and for this we recommend:
 - The length of the bunch (combination of power supply and data cables) should be a maximum 1.5 m. If the length of data cables exceeds 1.5 m or if the cable is leading towards the switchboard, we recommend installing surge protectors.
 - Data cables must not have a reticular tension of \sim 230 V/50 Hz or \sim 120 V/60 Hz.
- Sufficient space must be left between individual connectors for the handling of cables,
- To ensure correct functioning of the router we recommend the use of an earth-bonding distribution frame for the grounding of the power supply of the router, data cables and antenna within the switchboard.



5.6 Removal of the DIN Rail

The DIN holder is suitable for a DIN rail according to EN 60715 standard only. The default position of BB-SBD25 holder, which is used for mounting the router on a DIN rail, is shown in the following figure:



Figure 13: Default position of DIN holder

In order to remove the DIN rail it is necessary to lightly push the router upward so that the top part of the BB-SBD25 holder hitched to the DIN rail comes out of this rail, then fold the top of the router away from the DIN rail.

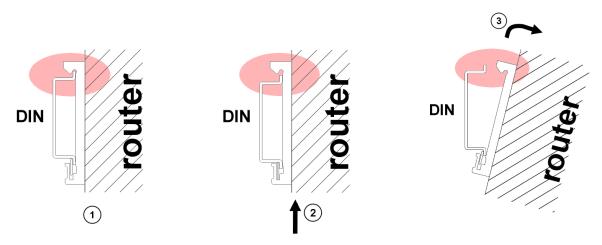


Figure 14: Removal of the DIN Rail

5.7 Description of the Rear Panel

The rear panel contains two holders for SIM cards (*SIM1*, *SIM2*) and *RST* button used to restore the default configuration followed by rebooting of the router. Picture with the rear view of the router is on figure 12. Description of resetting procedure is described in chapter 5.8.7.

5.8 Description of the Front Panel

On the front panel is the following:

Caption	Connector	Description			
PWR/IO	4-pin	Connector for the power supply and connection of the binary input and output.			
ETH	RJ45	Connector for connection into the computer network.			
RS232	DB9 female	Connector for serial interface RS232.			
ANT	SMA	Connector for main antenna.			
DIV	SMA	Connector for diversity antenna.			
WiFi	R-SMA	Connector for WiFi antenna (only for versions with WiFi module!).			

Table 4: Front panel description



Figure 15: SmartStart front panel



5.8.1 Status indication

There are three LED indicators on the front panel to provide router status information. The ETH port has two additional LEDs that provide information about the port status.

Caption	Color	State	Description
PWR	Green	Blinking On Fast blinking	Router is ready Starting of the router Updating firmware
DAT	Red	Blinking	Communication in progress on the radio channel
WAN	Yellow	LED goes out 1x per one sec. LED goes out 1x per two sec. LED goes out 1x per five sec.	Signal strength is from -50 dBm to -69 dBm Signal strength is from -70 dBm to -89 dBm or differ- ence between neighbouring cells is exactly 3 dBm Signal strength is from -90 dBm to -113 dBm or differ- ence between neighbouring cells is smaller than 3 dBm
ETH	Green	On Off	Selected 100 Mbps Selected 10 Mbps
ETH	Yellow	On Blinking Off	The network cable is connected Data transmission The network cable is not connected

Table 5: Status indication



The status indication of the WAN LED is updated every 10 seconds.

5.8.2 Power PWR/IO Connector

Panel socket 4-pin.

Pin number	Signal mark	Description
1	GND(-)	Negative pole of DC supply voltage
2	VCC(+)	Positive pole of DC supply voltage (+9 to +36 V DC, 1 A)
3	IN0	Binary input
4	OUT0	Binary output

Table 6: Connection of PWR / IO connector

 


Figure 16: PWR/IO connector

Unit has to be supplied by a power supply specified as a Limited Power Source (LPS) according to clause 2.5 of IEC/UL 60950-1 or CEC/NEC Class 2 source of supply as defined in the Canadian Electrical Code, CSA C22.1 and National Electrical Code, ANSI/NFPA 70. If the power supply/cable provided with device is not used, always use the cables with minimum wire size (nominal cross section) 0.5 square mm for power supply.

The power supply for the router must be between +9 V to +36 V DC, with current output 1 A. Protection against reversed polarity without signaling is built into the router. **Note:** The protection against reversed polarity is lost if the negative pole is grounded!

The router can be put into low power mode using a special command 1pm. It can then be awakened by an activity on binary input or using an internal timer. For more details of this command, see the application note *Commands and Scripts* [3].

The router is awakened after the power supply outage and subsequent renewal.

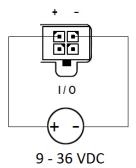


Figure 17: Circuit example – connection of power supply 18



The PWR/IO interface is also designed for the processing of binary input and control (setting) of binary output.

Binary Input

logical 0/1*	Voltage	Web interface status
logic 0	0 - 0.7 V	On
logic 1	1.6 – 36 V	Off

Table 7: Characteristics of binary input

* The binary input status in the Shell is returned via io get bin0.

Binary Output

The binary output is open in the default configuration. The current of the binary output is limited by a resettable fuse (200 mA).

5.8.3 Antenna Connector ANT, DIV and WiFi

The main and diversity antennas are connected to the router using the SMA connector on the front panel. There is also an R-SMA antenna connector available, through which an additional antenna can be connected, if the router is equipped with a WiFi module.

The *ANT* connector is used to connect the main antenna to the router. To connect the diversity antenna, the second antenna connector *DIV* is used. An R-SMA connector named *WiFi* is designed for the connection of a WiFi antenna (available only for versions with a WiFi module).

(i)

Ø

The router can not operate without a main antenna connected through the port marked as *ANT*!

An SMA connector is used for the connection of the antenna. The antenna is connected by screwing this antenna to the SMA connector on the front panel of the router (see figure below). Recommended tightening moment is 0.9 Nm.

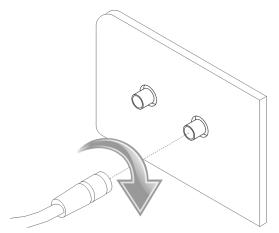


Figure 18: Connecting the antenna

A diversity antenna improves the radio capability of the router at low signal strength.



5.8.4 SIM Card Reader

The SmartStart SL302 contains two readers for 3 V and 1.8 V SIM cards, which are located on the rear panel of the device. In order for the router to function, it is necessary to insert an activated SIM card with an unblocked PIN code. The SIM cards may have different adjusted APNs (Access Point Names).

Changing the SIM card:

- Always disconnect the router from power supply before handling the SIM card!
- Using a plastic opening tool, or your fingernail, press the SIM card slightly into its slot until you hear a click.
- After hearing this click, release the card and it will pop out of its slot.
- Remove the SIM card and push any other SIM card into the slot until it clicks into place.



Figure 19: SIM cards





5.8.5 Ethernet Port ETH

The panel socket RJ45 is used for this interface. The Ethernet isolation is 1500 V.

Pin	Signal mark	Description	Data flow direction
1	TXD+	Transmit Data – positive pole	Input/Output
2	TXD-	Transmit Data – negative pole	Input/Output
3	RXD+	Receive Data – positive pole	Input/Output
4	—	—	
5	—	—	
6	RXD-	Receive Data – negative pole	Input/Output
7	—	—	
8	—	—	

Table 8: Connection of Ethernet connector



Figure 20: Ethernet connector

The Ethernet cable plugs into the RJ45 connector labeled as ETH (see figure below).

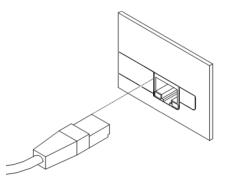



Figure 21: Connection of Ethernet cable

5.8.6 Serial Port RS232

This interface is physically connected through the DB9 Female connector.

Pin	Signal mark	Description	Data flow direction
1	DCD	Data Carrier Detect	Output
2	RXD	Receive Data	Output
3	TXD	Transmit Data	Input
4	DTR	Data Terminal Ready	Input
5	GND	System Ground	—
6	DSR	Data Set Ready	Output
7	RTS	Request to Send	Input
8	CTS	Clear to Send	Output
9	RI	Ring Indicator	NC

Table 9: Connection of RS232 connector

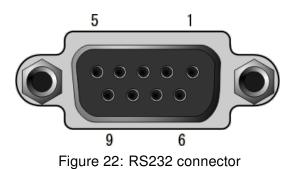



5.8.7 Reset

When the *PWR* LED starts flashing on the front panel, it is possible to restore the default configuration of the router by pressing the *RST* button on the rear panel. After pressing this button, the default configuration will be restored and the router will reboot (after which the green LED will be on).

In order to press the *RST* button it is necessary to use a narrow screwdriver or other small tool.

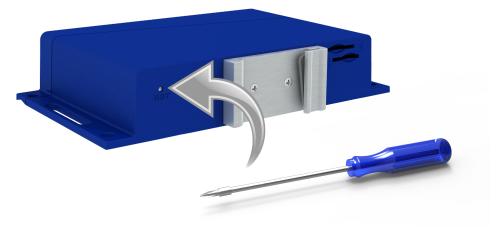


Figure 23: Router reset

Before resetting the router, it is recommend to back up the router configuration settings (see *Configuration manual*) because resetting the router will return all configuration settings to their default states.

It is important to distinguish between a router reset and reboot.

Action	Router behavior	Invoking events
Reboot	Turns off and then turns on the router	Disconnect and reconnect the power, press the <i>Reboot</i> button in the web configuration
Reset	Restores the default configuration and reboots the router	Press the <i>RST</i> button

Table 10: Description of router reset and restart

6. First Use

AD\ANTECH

B+**B** SMARTWORX

Powered by

6.1 Connecting the Router Before the First Use

Before putting the router into operation it is necessary to connect all of the components that are required to run your applications. Don't forget to insert a SIM card.

The router can not operate without a connected antenna, SIM card and power supply. If the antenna is not connected, the router may be damaged.

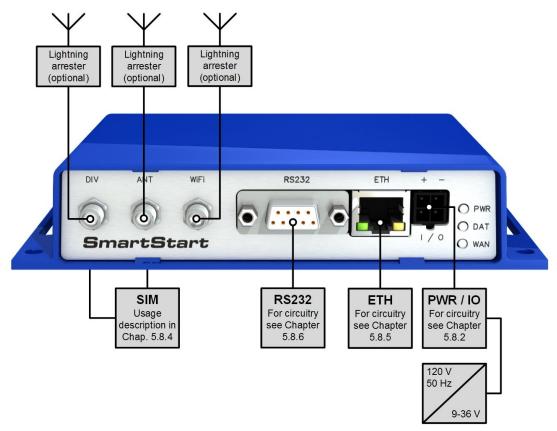


Figure 24: Router connection



6.2 Start

The router will start when a power supply is connected to the router. By default, the router will automatically start to log on to the default APN. The DHCP server will start to assign addresses for devices connected through the Ethernet port ETH. These router behaviors can be changed via the web interface. This is described in detail in the *Configuration manual for SmartStart*.

6.3 Configuration

Attention! If no SIM card is inserted in the router, it is not possible for the router to operate. Any inserted SIM card must have active data transmission.

6.3.1 Configuration by web browser

For status monitoring, configuration and administration of the router, a web interface is available, which can be accessed by entering the IP address of the router into the web browser. The default IP address of the router is 192.168.1.1. Attention, it is necessary to use HTTPS protocol for secure communication over a network!

(=) (=) (=) https://192.168.1.1/			Router	×	
SmartStart LT	E Rout	er			
Status					Network S

Figure 25: Entering the IP address of the router

By default, configuration can only be performed with the default username "root" and default password "root".

Login	
Username	
Password	
Login	

Figure 26: Entering login information



Ô

Once the login information are entered successfully, the user will have access to the router's web interface via the web browser.

Status	General Status
General	Mobile Connection
Mobile WAN	SIN Card : Primary
WiFi WiFi Scan	IP Address : Unassigned State : Offline
Network	» More Information «
DHCP	
IPsec DynDNS	Primary LAN
System Log	IP Address : 10.40.28.66 / 255.255.25.0 MAC Address : 7C165.9D13810F0
Configuration	Rx Data : 4.2 MB Tx Data : 140.8 KB Bridged : Yes
LAN VRRP	» More Information «
Mobile WAN	WiFi
PPPoE	IP Address : Unassigned
WIFI WLAN	MAC Address : 78:A5:04:22:2A:67
Backup Routes	» More Information «
Firewall	Peripheral Ports
NAT	Expansion Port 1 : RS-232
OpenVPN IPsec	Expansion Port 2 : None Binary Input 0 : Off
GRE	Binary Input 1 : Off Binary Output : Off
L2TP	
PPTP DynDNS	System Information
NTP	Firmware Version : 6.0.1 Serial Number : N/A
SNMP	Profile : Standard Supply Voltage : 12.0 V
SMTP SMS	Temperature : 38 °C
Expansion Port 1	Time : 2000-05-16 00:57:08 Uptime : 0 days, 0 hours, 39 minutes
Expansion Port 2	
USB Port	
Startup Script Up/Down Script	
Automatic Update	
Customization	
User Modules	
Administration	
Users	
Change Profile	
Change Password Set Real Time Clock	
Set SMS Service Center	
Unlock SIM Card	
Send SMS	
Backup Configuration	
Restore Configuration Update Firmware	
Reboot	
Logout	

Figure 27: Router web interface

A detailed description of the router settings in the Web interface can be found in the *Configuration manual for SmartStart*.

7. Technical Parameters

7.1 Basic Parameters

AD\ANTECH

B+**B** SMARTWORX

Powered by

SmartStart			
Temperature range	Operating Storage	-40 °C to +75 °C* -40 °C to +85 °C	
Humidity	Operating Storage	0 to 95 % relative humidity non condensing 0 to 95 % relative humidity non condensing	
Altitude	Operating	2000 m/70 kPa	
Degree of protection		IP30	
Supply voltage		9 to 36 V DC	
Battery for RTC		CR1225	
Consumption without WiFi	Average Maximum	2.1 W 4.8 W	
Consumption with WiFi	Average Maximum	2.7 W 5.5 W	
Sleep mode consumpti	on	40 mW	
Dimensions		30 x 87 x 150 mm (DIN 35 mm, EN 60715)	
Weight		approximately 187 g (depends on interface)	
Antenna connectors		2x SMA – 50 Ohm 1x R-SMA – 50 Ohm (only for WiFi)	

Table 11: Basic parameters

 * Temperature range for routers equipped with WiFi module is reduced to -25 $^\circ$ C to +55 $^\circ$ C!



7.2 Technical specification of user interfaces

	ETH	RS232
Connector	RJ45	DB9 Female
Standard	EN 1434	IEEE 802.3
Min. data rate	10 Mbps	300 bps
Max. data rate	100 Mbps	230400 bps
Max. total cable length (300 Bd, 200 nF/km)	100 m	20 m

Table 12: Technical specification of user interfaces

7.3 Standards and Regulations

The router complies with the following standards and regulations.

Standards and regulat	tions
Industrial	FCC 15.107 Class B, FCC 15.109 Class B, FCC ID 2AIQR-SL302, Contains: FCC ID RI7LE910NAV2. WiFi version contains: FCC ID VRA-SG9011059B. PTCRB IEC 61000-6-2:2005
Safety	EN 60950-1:2006 + A11:2009 + A1:2010 + A12:2011 + A2:2013, EN 62311:2008 UL 60950-1, United States and Canada, UL File No.: E486108
Carrier approvals	AT&T, Verizon
Environmental	REACH, RoHS and WEEE compliant
	Table 13: Standards and regulations

7.4 Type Tests and Environmental Conditions

Phenomena	Test	Description	Test levels
ESD	EN 61000-4-2	Enclosure contact Enclosure air	± 6 kV (crit. A) ± 8 kV (crit. A)
RF field AM modulated	EN 61000-4-3	Enclosure	10 V/m (crit. A) (80 – 2700 MHz) 3 V/m (crit. A) (2700 – 6000 MHz)

Continued on the next page

Powered by

Phenomena	Test	Description	Test levels
Fast transient	EN 61000-4-4	Power port Ethernet port RS232 port I/O port	± 2 kV (crit. A) ± 1 kV (crit. A) ± 1 kV (crit. A) ± 1 kV (crit. A)
Surge	EN 61000-4-5	Ethernet port Power port	\pm 1 kV (crit. A), shielded cab. \pm 0,5 kV (crit. A)
RF conducted	EN 61000-4-6	All ports	10 V/m (crit. A) (0,15 – 80 MHz)
Radiated emission	EN 55022	Enclosure	Class B
Conducted emission	EN 55022	DC power ports Ethernet ports	Class B Class B
Dry heat	EN 60068-2-2	Operation Storage	+75 °C, 40 % rel. humidity, 16 hours +85 °C, 40 % rel. humidity, 16 hours
Cold	EN 60068-2-1	Operation Storage	-40 °C, 16 hours -40 °C, 16 hours
Damp heat	EN 60068-2-30, test Db	+55 °C/+25 °C, 12	h – 12 h, 2 cycles
Temperature variation EN 60068-2-14 Nb -40 °C/+75 °C, 3 h/3 h, 2 cycles, 3 K/min		/3h, 2 cycles, 3K/min	
Vibration	EN 60068-2-64 ed. 2	Transport. box DIN rail direct mounting	3 axis, 1 hour per axis 3 axis, 0.5 hour per axis 3 axis, 8 hours per axis
Shock	EN 60068-2-27 ed. 2	half-sine, 15 g peak	, 11 ms, 6 pulses per axis
Isolation	-	Ethernet port	1.5 kV

Continued from previous page

Table 14: Type tests and environmental conditions

7.5 Technical Parameters of Cellular Module

Cellular module for NAM				
LTE parameters	Bit rates: 10 Mbps (DL) / 5 Mbps (UL) LTE FDD Cat.1, 3GPP release 9 compliant Supported bandwidths: 5 MHz, 10 MHz, 20 MHz Supported frequencies: 700 MHz (B12/B13), 850 MHz (B5), AWS 1700 MHz (B4), 1900 MHz (B2)			
UMTS parameters	Bit rates: 42.2 Mbps (DL) / 5.74 Mbps (UL) Supported frequencies: 850 MHz (B5), 1900 MHz (B2)			
Other parameters	Rx Diversity and MIMO DL 2x2			

Continued on next page



Continued from previous page

Cellular module for NAM

Table 15: Technical parameters of cellular module

7.6 Technical Parameters of WiFi

WiFi	
Antenna connector	R-SMA – 50 Ω
Supported WiFi band	2.4 GHz
Standards	802.11b, 802.11g, 802.11n
2.4 GHz supported channels	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11
RX Sensitivity	11b, 11 Mbps: typ85 dBm 11g, 54 Mbps: typ70 dBm (HT20) 11n, MSC7: typ66 dBm (HT40) 11n, MSC7: typ62 dBm
TX Output Power	11b, 11 Mbps: min. 18, typ. 19, max. 20 dBm 11g, 54 Mbps: min. 14.5, typ. 16, max. 17.5 dBm 802.11n (HT20): min. 13.5, typ. 15, max. 16.5 dBm 802.11n (HT40): min. 13.5, typ. 15, max. 16.5 dBm
Type of device	Access point, station
Table	16. Technical parameters of WiFi

Table 16: Technical parameters of WiFi

7.7 Other Technical Parameters

Other technical parameters	
CPU power	2 DMIPS per MHz
Flash memory	256 MB
RAM	512 MB
M-RAM	128 kB

Table 17: Other technical parameters



8. Recommended Literature

- [1] Advantech B+B SmartWorx: Start Guide for SmartStart,
- [2] Advantech B+B SmartWorx: SmartStart Configuration Manual,
- [3] Advantech B+B SmartWorx: Commands and Scripts.



9. Troubleshooting

If you cannot connect to the router from your PC, your network card may be configured in such a way that it is not possible to connect to the router. Take one or more of the following steps in order to solve the problem:

- Set the communication rate to 10 MB/s in the properties of your network card.
- Connect the router to the PC via Switch.
- Connect the router to the PC, start the router first and then start the PC after the router's initialization.

9.1 FAQ

I have NAT enabled. My equipment is not connecting to the network.

• The device's gateway has to be configured the same as the router's.

M The router resets itself and the Ethernet connection fails.

• The router will not function without an antenna. Keep the antenna as far as possible from the power supply.

Loan't access the Web server over NAT.

• The remote HTTP access of the router has to be disabled, the default server address has to be your web server and the gateway of the web server has to be the IP of the router.

Mobile WAN connection fails. (DAT LED off)

- Check the signal power. If the signal power is weak, you will have to use a better antenna. If the neighboring cells have a similar signal strength, you will need to use a directional antenna. For proper operation, the signal levels have to be within the range of -50 dBm to -90 dBm.
- It is necessary to set the router to ping, which will check the connection and, in the case of a failed ping, restart the connection.

Mobile WAN connection cannot be established. (DAT LED off)

- Try to enter the SIM card PIN verify that the SIM card has the PIN code entered.
- In a private APN, switch the DNS server send off.
- Switch the system log on and observe to see where the error occurs.

Ethernet connection fails or isn't establishing.

• It is possible to turn auto negotiation off and set a rate and duplex manually on the Ethernet interface of the router.

DynDNS doesn't function.

- With private APN this is not functional.
- If the same IP address is recorded in your canonic name as a dynamically assigned address, it means that the operator is using NAT or a firewall.
- Verify NAT using ping to the static server address.
- Verify a Firewall by accessing remotely to the router's Web interface.
- The operator may not provide the address of DNS server and without DNS server's address it is impossible to connect to the dyndns.org server. The following messages will be shown in the system log:
 - DynDNS daemon started
 - Error resolving hostname: no such file or directory
 - Connect to DynDNS server failed

L2TP or IPSec isn't establishing.

- Check the system log for error messages.
- I switched the router to offline mode by SMS message, but the router is in online mode after restart.
 - SMS messages do not change the router configuration. They remain in effect only until the router is restarted.

En Serial communication is not functional.

• Verify that the router supports serial communications. Also verify the serial communication settings. To do so, open the router's configuration menu via the web browser, select the appropriate expansion port and verify the settings in the configuration menu. B+B SMARTWORX
Powered by
AD\ANTECH

10. Customers Support

10.1 Customer Support for NAM

Phone: +1-800-346-3119 (Monday – Friday, 7 a.m. to 5:30 p.m. CST) Fax: +1-815-433-5109 E-mail: support@advantech-bb.com

Web: www.advantech-bb.com

10.2 Customer Support for Europe

Phone:+353 91 792444Fax:+353 91 792445E-mail:techSupport@advantech-bb.comWeb:www.advantech-bb.com

10.3 Customer Support for Asia

 Phone:
 +886-2-2792-7818 #1299 (Monday – Friday, 9 a.m. to 5:30 p.m. UTC+8)

 Fax:
 +886-2-2794-7327

 E-mail:
 icg.support@advantech.com.tw

 Web:
 www.advantech.com

Opkeep-advices:

- The SIM card must be handled carefully as with a credit card. Do not bend, do not scratch the card and do not expose the card to static electricity.
- When cleaning the router, do not use aggressive chemicals, solvents or abrasive cleaners!